



SYSTEMATIC ART[®]
Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Product Installation Guide

| | |
|--|------------|
| Sky Rail | P2 |
| Sky Rail – Installation Diagram | P3 |
| Slim Line Rail | P4 |
| Slim Line – Installation Diagram | P5 |
| Gallery Rail | P6 |
| Gallery Rail – Installation Diagram | P7 |
| Moderna Rail | P8 |
| Moderna Rail – Installation Diagram | P9 |
| Click Track Rail | P10 |
| Click Track Rail – Installation Diagram | P11 |
| Click Track Rail – Installation Detail | P12 |
| Click Track Rail – Installation Detail | P13 |



SYSTEMATIC ART[®]
Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Sky Rail: Ceiling Mounted System

1. The Sky-Rail is installed to the ceiling with the use of screws and anchors.
2. If affixing rail to (studs) or (beams) anchors in most cases will not be necessary.
3. Rail comes with 8 pre-drilled holes for easy installation.
4. When using anchors rail should be held in desired location and holes should be marked.
5. Once holes have been marked using a drill make your holes in the appropriate location in order to receive anchors. (Drill bit size will vary depending on the size of anchor)
6. Once holes have been made insert anchors. (In some cases a hammer might be necessary to insure anchor is flush to the ceiling)
7. Once anchors have been inserted to the ceiling rail is then ready to be secured.
8. Rail can be used in conjunction with the following hangers:
 - a. Stainless-Steel hanging rod
 - b. Aluminum hanging rod
 - c. J-Cable rod
 - d. J-Hook cable



SYSTEMATIC ART[®]


Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046


Sky Rail: Ceiling Mounted System

Specifications and Installation

Sky Rail

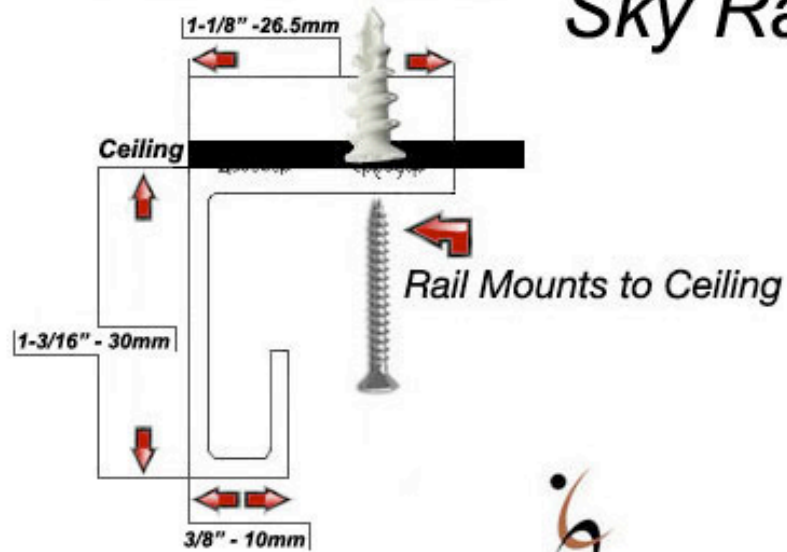

Required Installation Tools



© Copyright 2009 Systematic Art, LLC. All Rights Reserved.



SYSTEMATIC ART[®]
Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Slim-Line Rail: Ceiling Mounted System

1. The Slim-Line rail is installed to the ceiling with the use of screws and anchors.
2. If affixing rail to (studs) or (beams) anchors in most cases will not be necessary.
3. Rail comes with 8 pre-drilled holes for easy installation.
4. When using anchors rail should be held in desired location and holes should be marked.
5. Once holes have been marked using a drill make your holes in the appropriate location in order to receive anchors. (Drill bit size will vary depending on the size of anchor)
6. Once holes have been made insert anchors. (In some cases a hammer might be necessary to insure anchor is flush to the ceiling)
7. Once anchors have been inserted to the ceiling rail is then ready to be secured.
8. Rail can be used in conjunction with the following hangers:
 - a. Cobra cable
 - b. Ball-End cable rod
 - c. Ball-End cable
 - d. Ball-End rod




SYSTEMATIC ART[®]


Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Specifications and Installation

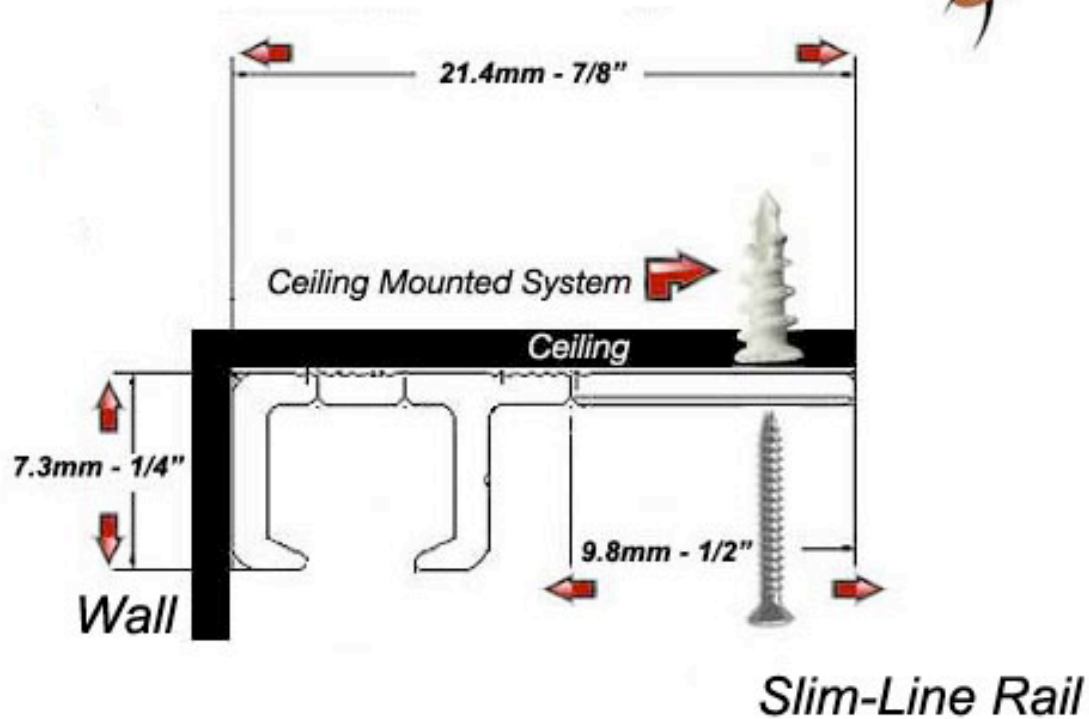

Required Installation Tools

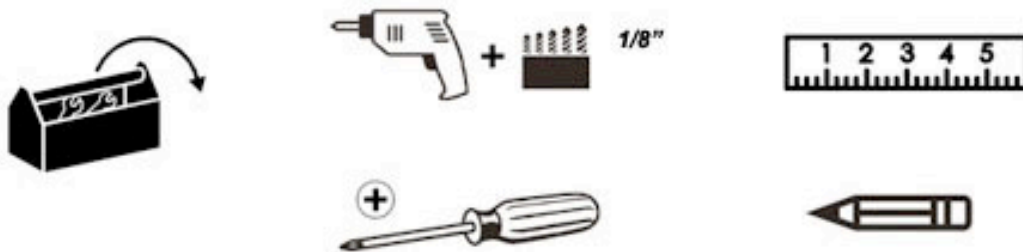



SYSTEMATIC ART[®]
Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Gallery Rail: Wall Mounted System

1. The Gallery is installed to the wall with the use of screws and anchors.
2. If affixing rail to (studs) or (beams) anchors in most cases will not be necessary.
3. Rail comes with 8 pre-drilled holes for easy installation.
4. When using anchors rail should be held in desired location and holes should be marked.
5. Once holes have been marked using a drill make your holes in the appropriate location in order to receive anchors. (Drill bit size will vary depending on the size of anchor)
6. Once holes have been made insert anchors. (In some cases a hammer might be necessary to insure anchor is flush to the wall)
7. Once anchors have been inserted to the wall rail is then ready to be secured.
8. Rail can be used in conjunction with the following hangers:
 - a. Stainless-Steel hanging rod
 - b. Aluminum hanging rod
 - c. J-Cable rod
 - d. J-Hook cable



SYSTEMATIC ART[®]


Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046


Gallery Rail: Wall Mounted System

Specifications and Installation

Gallery Rail

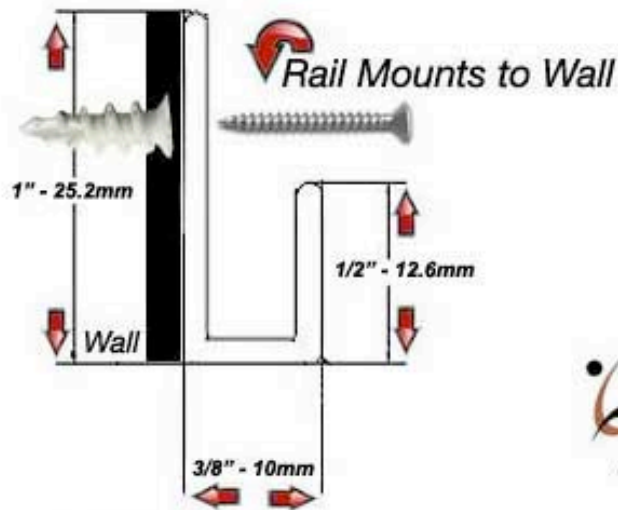

Required Installation Tools



© Copyright 2009 Systematic Art, LLC. All Rights Reserved.



SYSTEMATIC ART[®]
Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Moderna Rail: Wall Mounted System

1. The Moderna is installed to the wall with the use of screws and anchors.
2. If affixing rail to (studs) or (beams) anchors in most cases will not be necessary.
3. Rail comes with 8 pre-drilled holes for easy installation.
4. When using anchors rail should be held in desired location and holes should be marked.
5. Once holes have been marked using a drill make your holes in the appropriate location in order to receive anchors. (Drill bit size will vary depending on the size of anchor)
6. Once holes have been made insert anchors. (In some cases a hammer might be necessary to insure anchor is flush to the wall)
7. Once anchors have been inserted to the wall rail is then ready to be secured.
8. Rail can be used in conjunction with the following hangers:
 - a. Stainless-Steel hanging rod
 - b. Aluminum hanging rod
 - c. J-Cable rod
 - d. J-Hook cable



SYSTEMATIC ART[®]


Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046


Moderna Rail: Wall Mounted System

Specifications and Installation

Moderna Rail

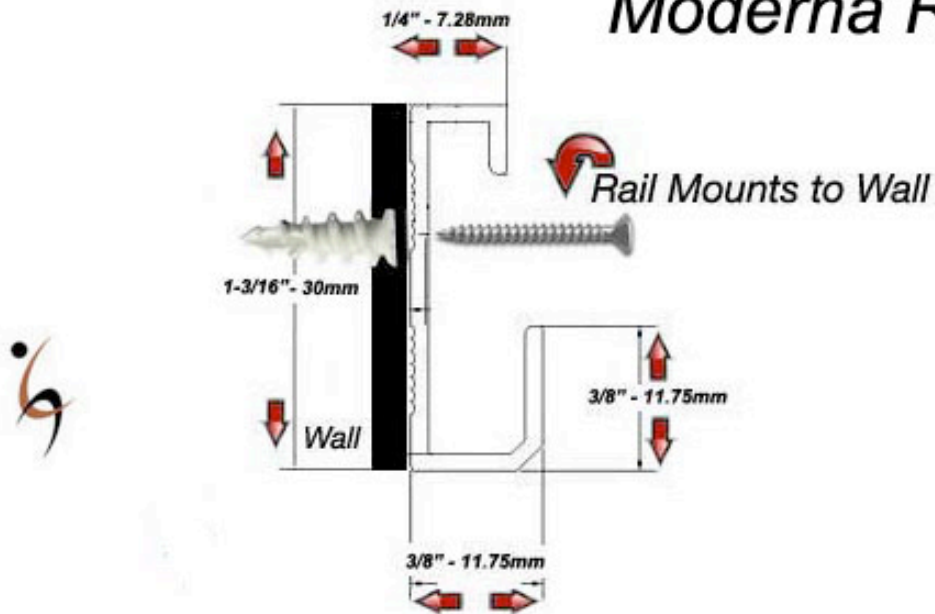

Required Installation Tools

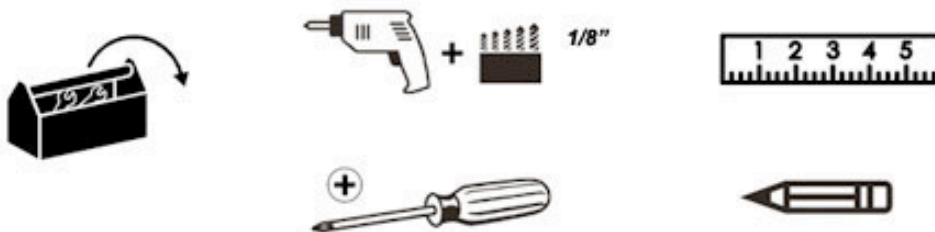



SYSTEMATIC ART[®]
Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Click-Track Rail: Wall Mounted System

1. The Click-Track rail is secured to the wall with the use of fastening clips.
2. Clips are simply installed to the wall and the rail snaps to the clips.
3. Using a level, make a straight line approximately 70 inches long.
4. After your line has been established evenly mark the line to accept 8 clips.
(Included with rail)
5. Once holes have been marked using a drill make holes to accommodate the supplied anchors.
6. If going in to wood, or studs anchors might not be necessary.
7. Once anchors are firmly secured to the wall screw the supplied clips to the anchors.
8. After the clips have been secured to the wall simply snap rail to the clips.
9. The Click-Track has a number of extra add-ons that include ends caps, corner connectors and rail connectors.
10. Rail can be used in conjunction with the following hangers:
 - a. Cobra cable
 - b. Ball-End cable rod
 - c. Ball-End cable
 - d. Ball-End rod




SYSTEMATIC ART[®]

Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046


Click-Track Rail: Wall Mounted System

Specifications and Installation

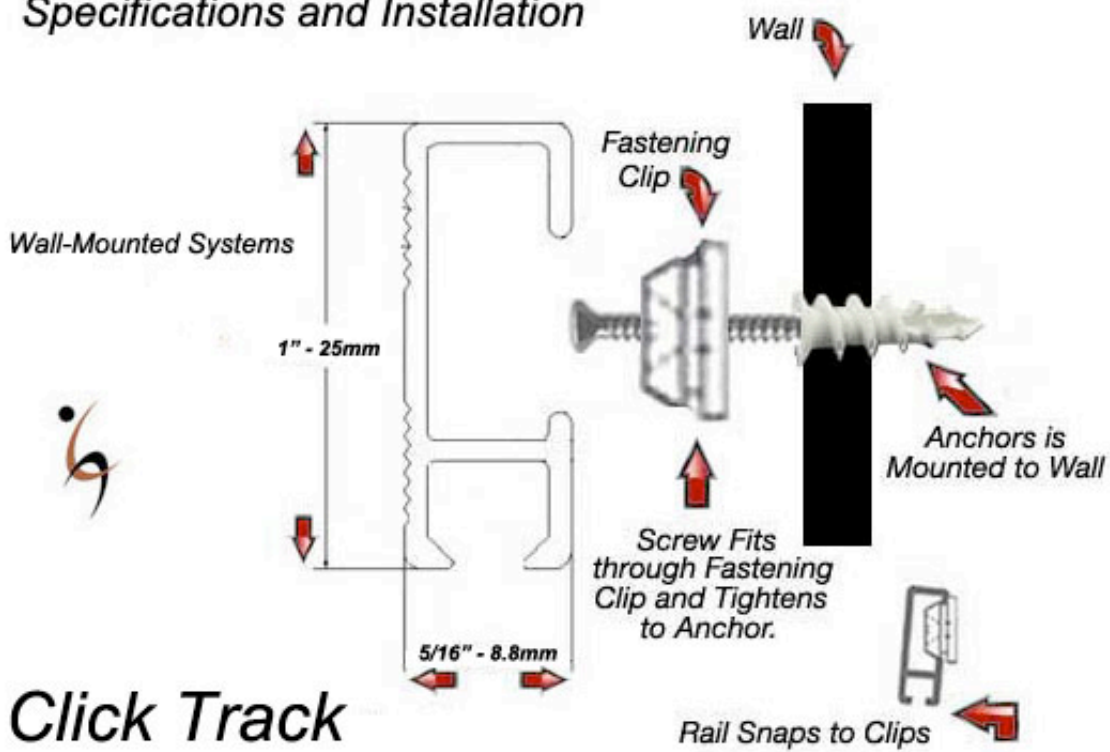

Click Track

Required Installation Tools



© Copyright 2009 Systematic Art, LLC. All Rights Reserved.




SYSTEMATIC ART[®]

Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Click-Track Rail: Wall Mounted System

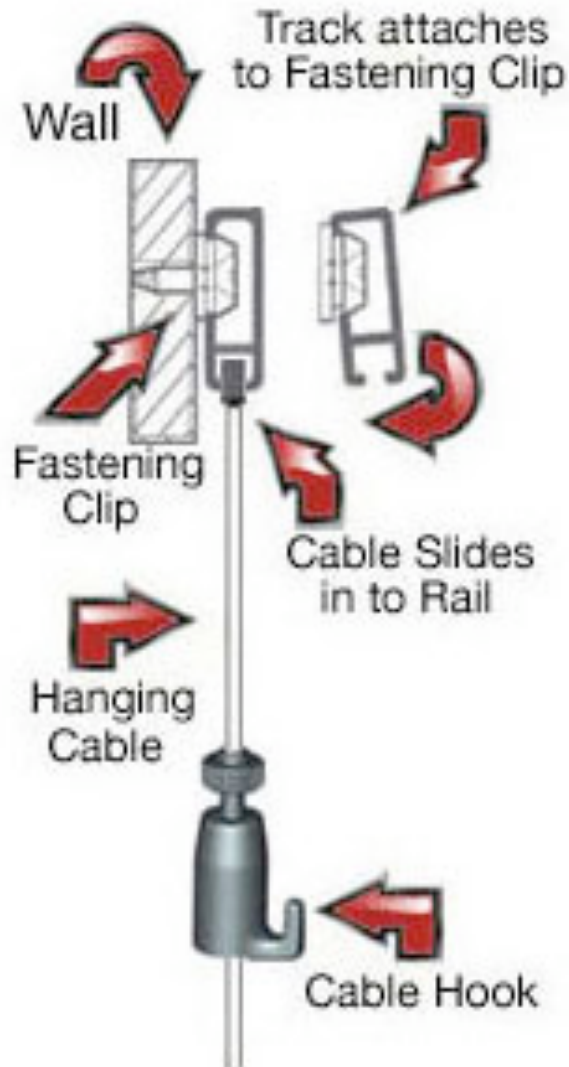



SYSTEMATIC ART[®]

Picture Hanging Systems

The Art of Hanging Art / www.SystematicArt.com
T.212.614.3233 F.212.254.1046

Click-Track Rail: Wall Mounted System

